

VFL Ceramic Sleeve 7mm

Product Images



Product Description

- Fiber Optic Visual Fault Locator Accessory Ceramic core.
- If the red light cannot enter the fiber, check whether the ceramic core is damaged. If yes, please replace the ceramic core, no need to repurchase the red light pen.
- Free the metal tip, remove the ceramic core with tweezers , and gently insert the new ceramic sleeve by hand, then install the metal tip.
- The Ceramic Core is fragile product, please take care when installing